



## ISKRA ME162 SINGLE PHASE DUAL TARIFF METER

**DISPLAY CYCLE – PRESS THE BLUE PUSH-BUTTON TO ADVANCE THROUGH THE DATA PARAMETERS**



= test screen – all LCD segments should be displayed to check they are in order. An indicator of energy flow direction is displayed in the bottom right hand corner.

T1

t 09:55:21 = time in hours: minutes: seconds. NB the time is permanently set to GMT

▼  
T1

d 26.07.07 = current date in DD-MM-YY

▼  
T1

00000000 = positive active energy total ie kWh total

▼  
T1

10000000 = positive active energy total for tariff 1 eg peak time kWh total

▼  
T1

20000000 = positive active energy total for tariff 2 eg off peak kWh total

▼  
T1

50000000 = negative active energy total ie kWh total for negative energy

▼  
T1

60000000 = negative active energy total for tariff 1 eg peak time negative kWh total

▼  
T1

70000000 = negative active energy total for tariff 2 eg off peak negative kWh total

▼  
T1

F0000000 = this is an error register

▼  
T1

01803 297179 | 01803 299488